



## MaxCell: Installation Instructions

When installing MaxCell®, two requirements are very important:

- Swivels must always be used
- The factory installed 1250 lb pull tapes must free-float during installation.

### Installation Instructions for Single-Packs

#### Step 1

Make a 2" incision through the MaxCell, 18" from the end. This incision should be parallel to the product and made 1/2 inch from the colored stitch edge of the product.



Step 1

#### Step 2

Pull out all pull tapes through this incision and cut off excess. Push remaining ends of pull tape back into the cells. The tapes must be pushed back far enough into cells, so that they free float during installation.



Step 2

#### Step 3

Tie a 6-foot piece of pull tape or rope through incision. Secure with non-slip knot.



Step 3

#### Step 4


With the tied on pull tape or rope, create 3 to 4 half-hitch knots down to the end of the MaxCell. The longer the pull, the more half-hitch knots are recommended. Under tension, tighten the half-hitch knots in succession, beginning with closest to the incision. Apply black vinyl tape over last two half-hitch knots and end of Maxcell.



Step 4

## Step 5

Tie the end of the exposed pull tape to a swivel using a non-slip knot. Tie the end of the pull tape or rope from the conduit to other end of the swivel.

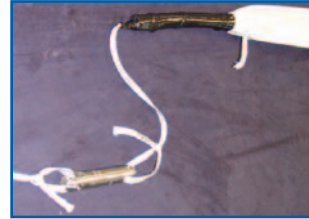

Step 5


## Step 6

Begin pulling MaxCell into the conduit. To further ensure the MaxCell does not spiral during installation, hand guide the MaxCell into the conduit opening, and maintain the angle and face of the MaxCell pack throughout duration of installation.

## Installation Instructions for Multiple Packs

### Step 7


Repeat steps 1 through 4 above for as many individual MaxCell “packs” being installed. An individual swivel must be applied to each individual MaxCell pack.

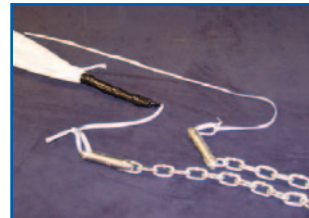

Steps 7, 8, and 9

### Step 8

Using conventional multi-way pulling harness or chain approach, connect the individual packs together in staggered fashion.

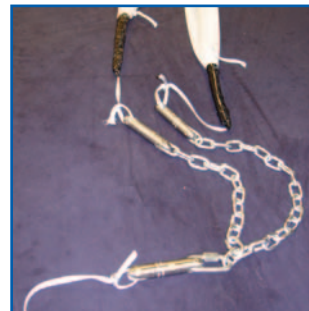

Steps 7, 8, and 9

### Step 9

A “parent” swivel should be attached to the end of the multi-way harness or chain. The pull tape or rope from the conduit should be attached to the parent swivel using a non-slip knot.

### Step 10

Begin pulling the MaxCell packs in. For best results, hand feed the packs into the conduit, keeping them together and faced the same way through the entire pull.



Steps 7, 8, and 9

